

SECTION II. INSTALLATION**8.2.1 INTRODUCTION**

The ASOS pressure sensor is installed in the acquisition control unit (ACU), data collection package (DCP), or in the Single Cabinet ASOS (SCA) at the factory. Thus, there are no user installation procedures required. The procedures for removal and installation of an individual pressure transducer are provided as part of the maintenance procedures contained in Section V.

\$
\$